




Vizable Technologies

Be Seen. Be Safe. Enjoy the Ride...


SB-FZ6 Installation

Before starting the installation please verify the operation of the brake lights.

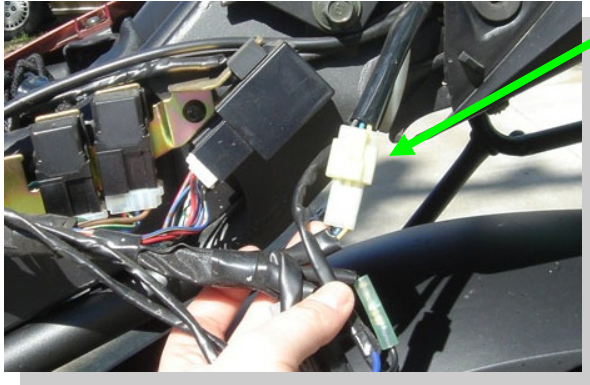

STEP 1:

Per the owners manual, remove the left side cover assembly to expose the 3pin-connector underneath.

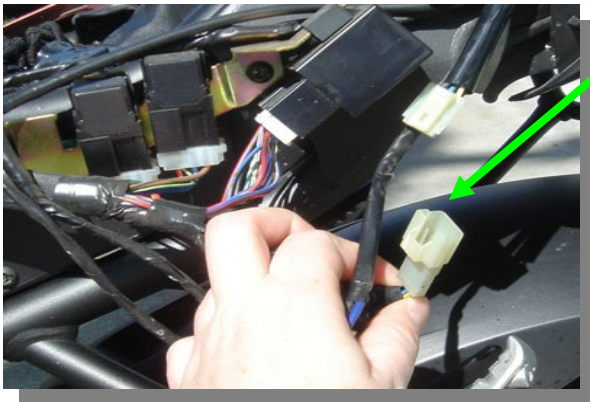

STEP 2:

Disconnect the 3-pin connector and attach the SB-FZ6 unit in series between the 3-pin connector from above.



STEP 3:

Secure the SB-FZ6 unit with supplied tie-wraps. Re-install side cover.

Test for functionality. Ride it and tell all your friends about Vizi-Tec!



Questions? Goto www.vizi-tec.com