




SB-919(CB900) Installation


Before starting the installation please verify the operation of the brake lights.

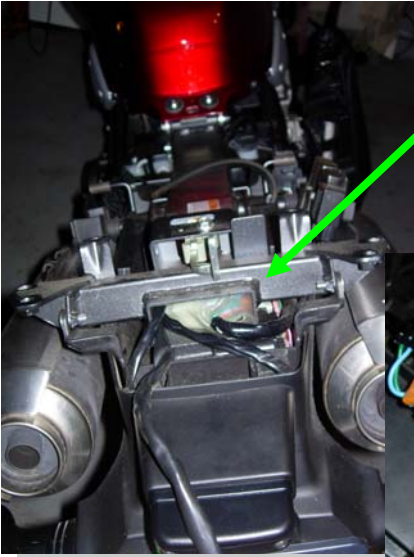

STEP 1:

Per the owner's manual, remove the seat and rear compartment to exposes the wire harness.

Locate the 3-positions connector that interfaces the two rear brake/running-lights bulbs.

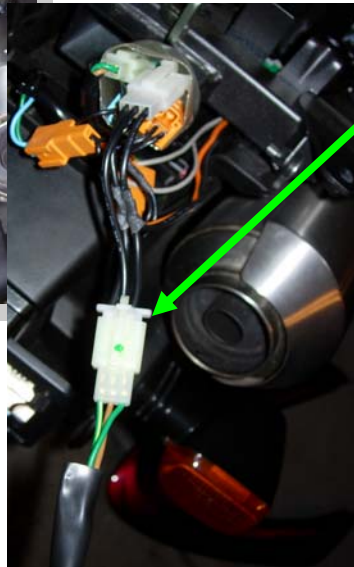

Unplug the 3-positions connector.


STEP 2:

Connect the SB-919(CB900) in series between the above connector.



STEP 3:

Test functionality of unit. Using supplied tie-wrap tuck SB-919(CB900) unit into rear compartment cavity. Reinstall rear compartment and seat per owner's manual.

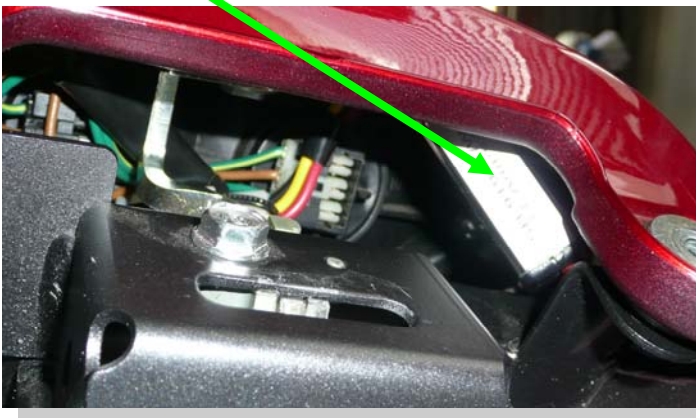

Ride it and tell all your friends about vizi-tec.

Done!



Questions? Goto www.vizi-tec.com