




## SB-R1200RT Installation

Before starting the installation please verify the operation of the brake lights.

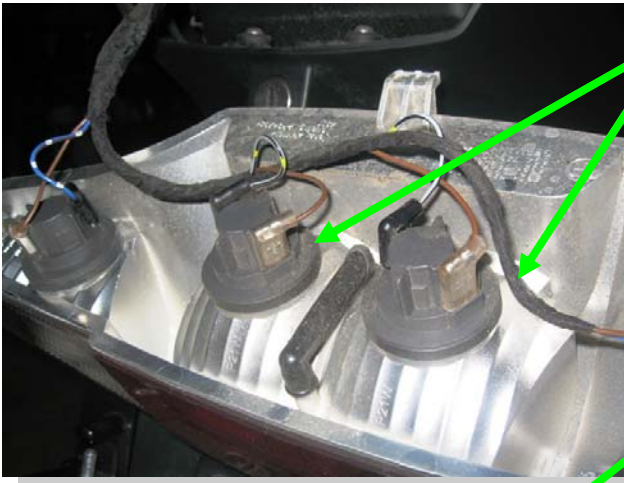

### STEP 1:

Per the owner's manual, remove the rear light module to expose the quick disconnects.

Note the pair of 1156 type bulbs.

**Black/Grey/Yellow = Live(PWM Signal)**  
**BROWN wire = Ground (Return)**

Unplug these two wire pairs from bulbs.


### STEP 2:

Connect the output of the SupaBrake to the two 1156 bulbs.

Note SupaBrake color code:

**Red = Live(PWM Signal)**  
**Black = Ground (Return)**

Plug the input of the SupaBrake to one of the original disconnected pairs of wires from STEP 1. We recommend using some electrical tape of the extra open female connector from STEP 1.

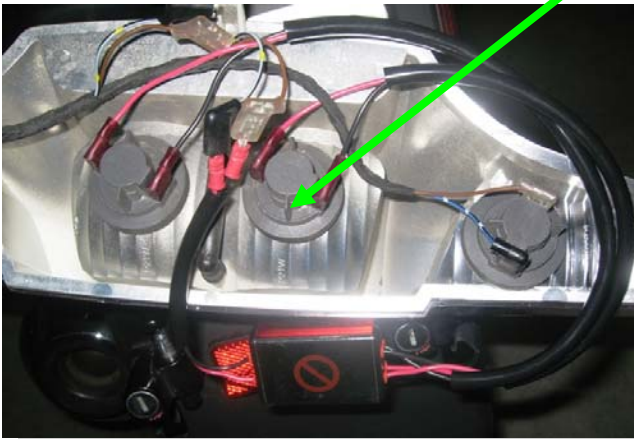

### STEP 3:

We recommend using some electrical tape to seal the extra pairs of wires from STEP 1.

Using supplied tie-wrap tuck unit in tail cavity. Test functionality of unit. Reinstall light module. Done

**INPUT**



**OUTPUTS**