

## SN490i Installation (page 1 of 3)


Before starting the installation please verify the operation of the brake lights and turn indicators.



### STEP 1:

Remove the right side panel to expose the 5-conductor connector.

Disconnect(open) this connector!

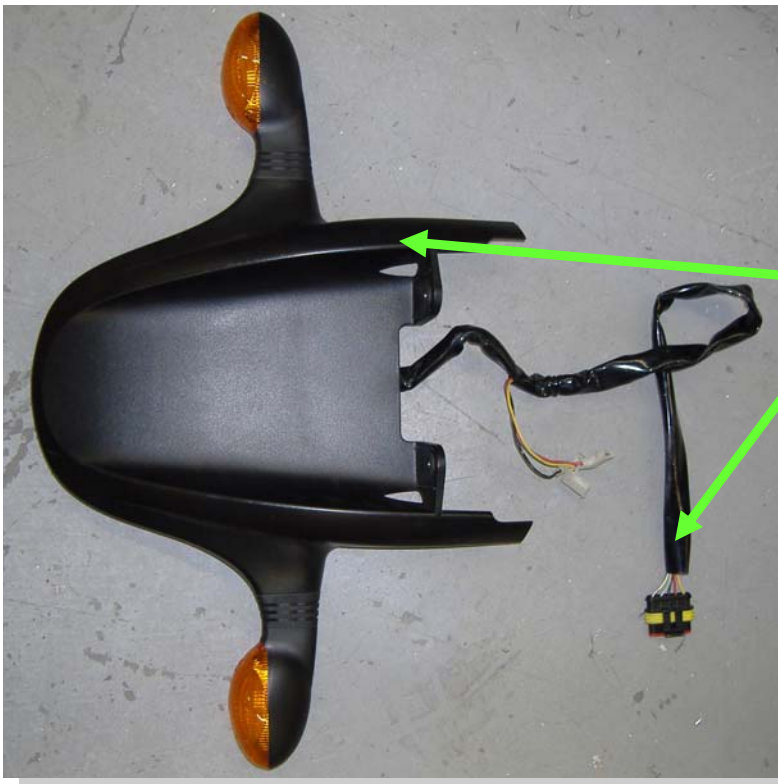

### STEP 2:

Remove and discard cable harness downstream from above connector.

#### NOTES:

If using custom "tail-chop" bracket, remove and discard the "beer-tray" also.

If keeping/using stock "beer-tray", remove cable harness and turn indicators only. You will need the stock beer-tray to mount the SN-490i on.

## SN490i Installation (page 2 of 3)



### STEP 3:

Install and tighten the SN490i.



### STEP 4:

Route the SN490i cable by feeding it through hole as shown to terminate with stock connector.





Be Seen. Be Safe. Enjoy the Ride...

# Vizable Technologies

## SN490i Installation (page 3 of 3)



### STEP 5:

Reinstall right side panel and seat/cowl.

Power up motorcycle and test.  
Done!

Shown with vizi-tec's bracket

