

BMW – K 1200 GT

Vizi-tec.com Diagram


NOTE Wire color:

BMW Brown = Ground = VT Black


BMW Grey/blk/yel = Brakes = VT White (modulated load side)

BMW Grey/blk/yel = Brakes = VT Red (Stock signal from bike)

Existing Female terminals after disconnection off tail light. There will be 2 sets. Only need to use one.

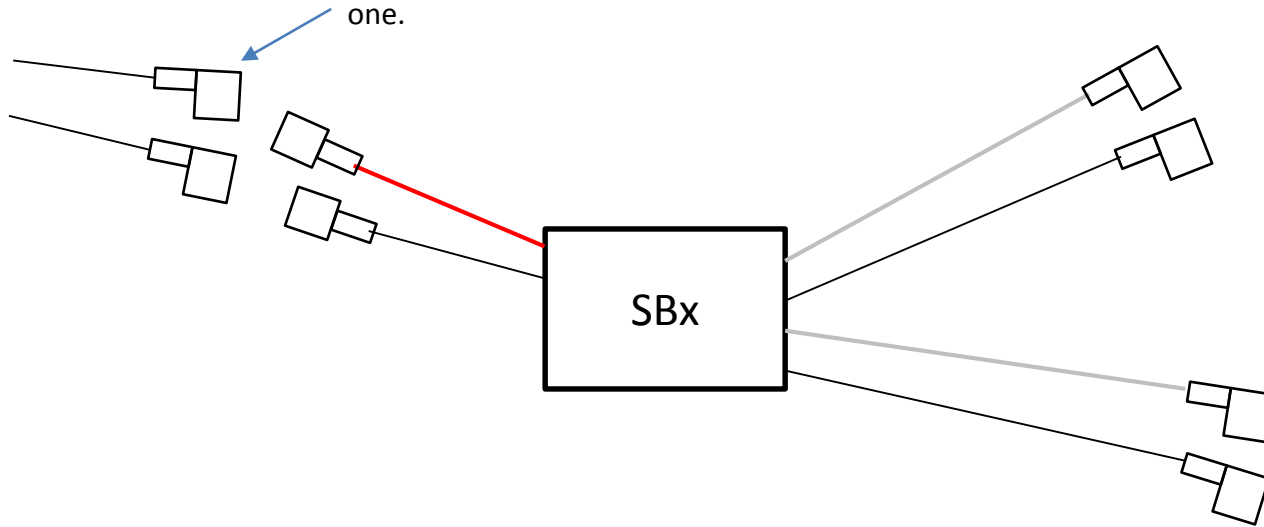

Tail light

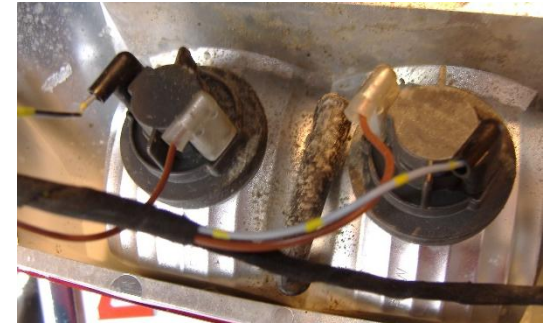

Existing Female terminals after disconnection off tail light. Leave these open. Use some electrical tape to keep them clean/isolated. You may use these to plug in any future load if you choose to replace your 1156 bulbs with LEDs. Your K 1200 GT may need them as it will throw up the nasty /!\ on the dash.