

# BMW – R 1150 RT

## Vizi-tec.com Diagram


The R 1150 RT needs to see the full load of the stock bulbs each time the brake light is on. Meaning when SBx does its thing. The bike thinks the bulbs are burnt out. As a result your SBx will have an external dummy load. If disconnected you may see a /!\ if/when the SBx modulate the tail light.

NOTE Wire color:

BMW Brown = Ground = VT Black

BMW Grey/blk/yel = Brakes = VT White (modulated load side)

BMW Grey/blk/yel = Brakes = VT Red (Stock signal from bike)

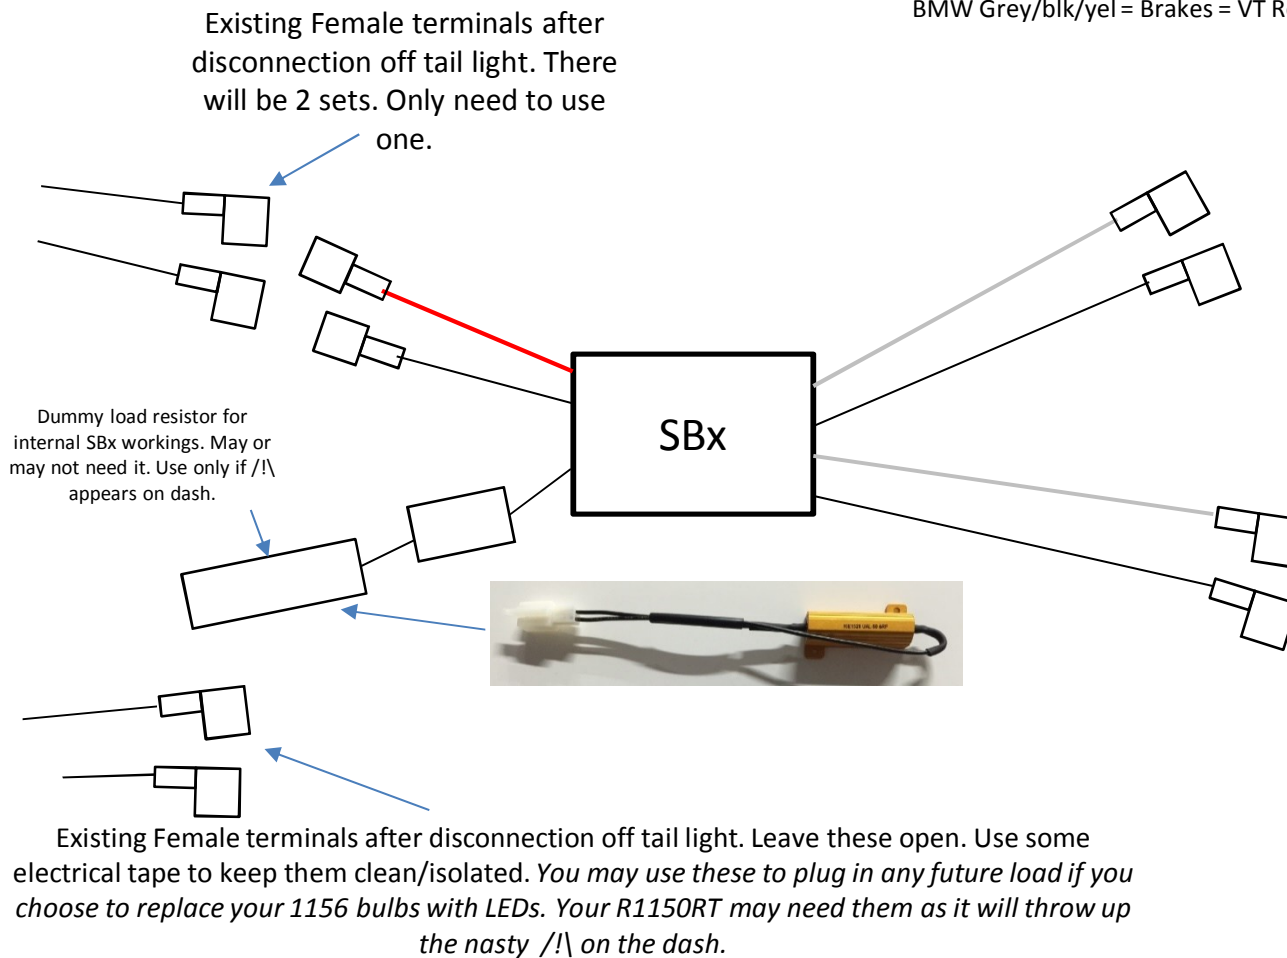

### Tail light

