




Vizable Technologies

Be Seen. Be Safe. Enjoy the Ride...


SB-749/999 Installation

Before beginning the installation please verify the operation of the turn signals and brake lights.

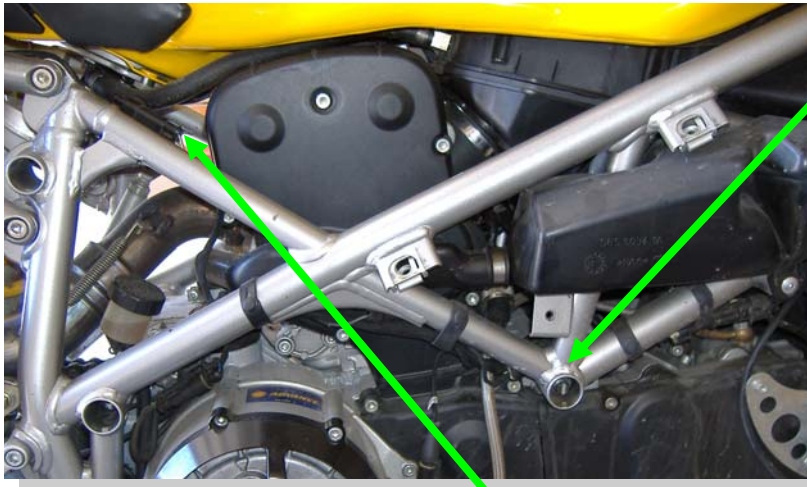

STEP 1:

Per the owner's manual, remove the right fairing panel to expose the frame structure.

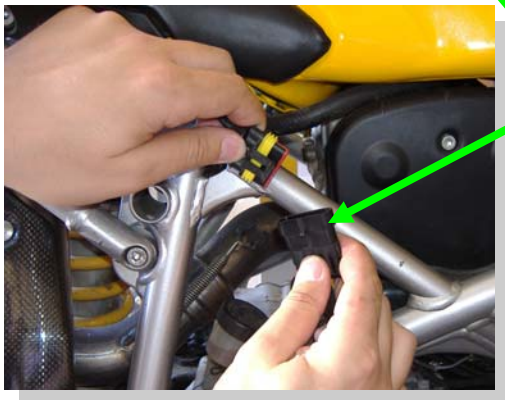

STEP 2:

Disconnect the 5-poles connector to the rear light module.



STEP 3:

Plug the SB-749/999 unit in series between the above 5-poles connector and route wires as shown.

Secure the SB-749/999 unit with supplied tie-wraps. Test the functionality of the turn signals and brake light. Reinstall fairing panel. Done!

