



## SB-M696/1100 Installation

Before starting the installation please verify the operation of the brake lights.



(REAR OF MOTORCYCLE)


### STEP 1:

Per the owner's manual, release the seat from the frame and pull backwards to expose underseat compartment.



### STEP 2:

Using the proper Allen Keys, remove the compartment to expose the 3-position connector of the taillight. Remove this connector.

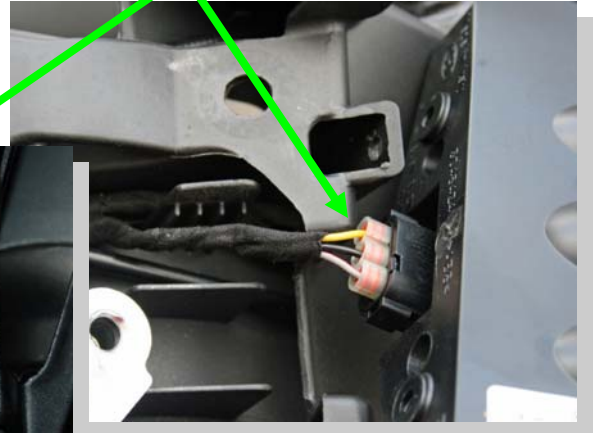

Questions? Goto  
[www.vizi-tec.com](http://www.vizi-tec.com)

### STEP 3:

Install the SB-M696/1100 unit in series with the above connector and tuck unit inside the small compartment shown. Secure with tie-wraps if needed. (Optional double sided tape can be used). Turn on the ignition and test brake lights for functionality. Reinstall seat. Done!

