




SB-Vulcan Installation

Before starting the installation please verify the operation of the turn signal indicators and brake lights.


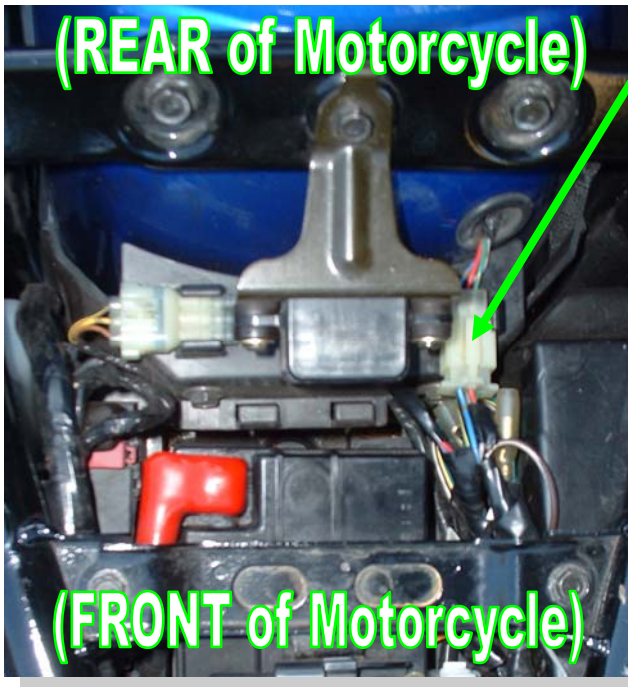


STEP 1:

Per the owner's manual, remove the rear seat compartment to expose the 6-conductor OEM nylon connector.

STEP 2:

Disconnect this connector.

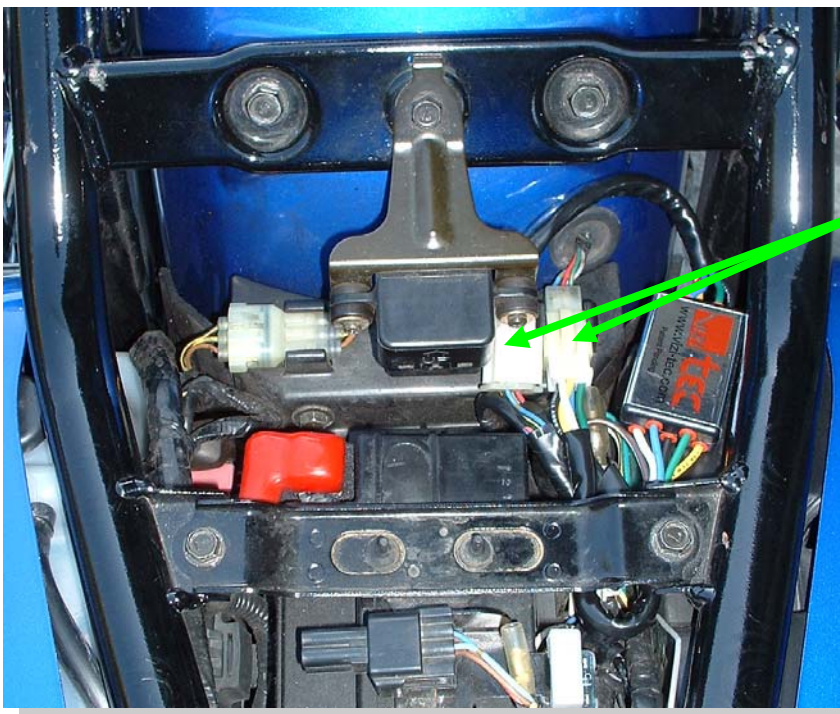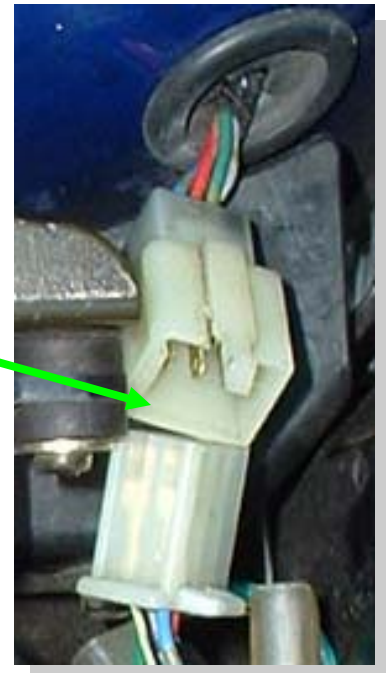

STEP 3:

Plug the SB-Vulcan unit in series between the opened connector and route wires as shown. Secure the SB-Vulcan unit with supplied tie-wraps as shown.

Reinstall seat and test the functionality of the brakes and turn signals. Done!



Questions? Goto www.vizi-tec.com