
SB-910 Installation


Before starting the installation please verify the operation of the brake lights.

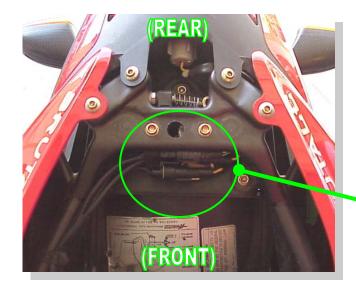

STEP 1:

Per the owner's manual, remove the rear seat compartment to expose the 3-pin connector inside.

Slide the connector off the frame (metal tab) and disconnect.

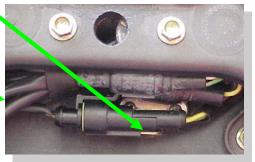

(Picture shown connector connected)

STEP 2:

Plug the SB-910 unit in series between the said connector and route wires as shown.





STEP 3:

Secure the connector on the frame using the metal tab (per step 1:). Secure the SB-910 unit with supplied tie-wraps and double sided tape as shown. Turn on the ignition and test brake lights for functionality. Reinstall seat. Done!

