


SB-HyperMotard Installation

Before starting the installation please verify the operation of the brake lights.


STEP 1:

Per the owner's manual, remove the seat to expose the taillight... (Use 4mm Allen)

Remove the taillight assembly. (Use 12mm deep-well socket)

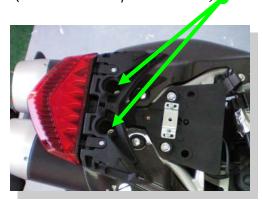



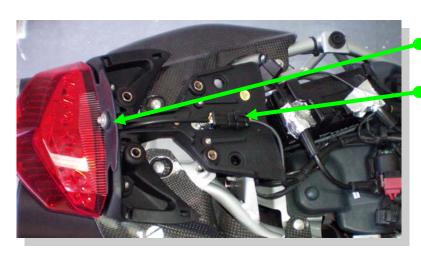

STEP 2:

Turn the taillight assembly over to expose the 3-pin connector plug.

Disconnect this connector.


STEP 3:

Plug the SB-HyperMotard in series between the 3-pin connector plug. Test the unit.





SB-HyperMotard Installation

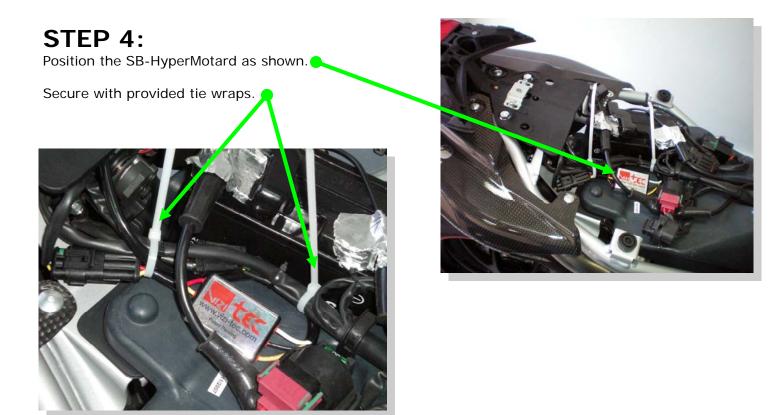

STEP 5:

Cut off excess tie wraps. Turn the taillight assembly over and reinstall. Reinstall seat.

Test for functionality. Ride it, and tell all your friends about us!



Questions? Goto www.vizi-tec.com