




SB-ST1050 Installation

Before starting the installation please verify the operation of the brake lights.

STEP 1:


Remove the rear mud flap cover to expose the wires and connectors.

Disconnect(open) the 3 conductor connector assembly to the rear brake light module.

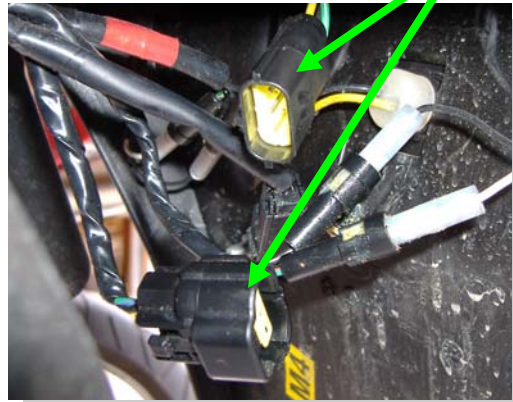

STEP 3:

Tuck and secure the SB-ST1050 unit and connectors with supplied tie-wraps as shown and reinstall the rear mud flap cover as per STEP 1: . (See Data-sheet for more installation help)

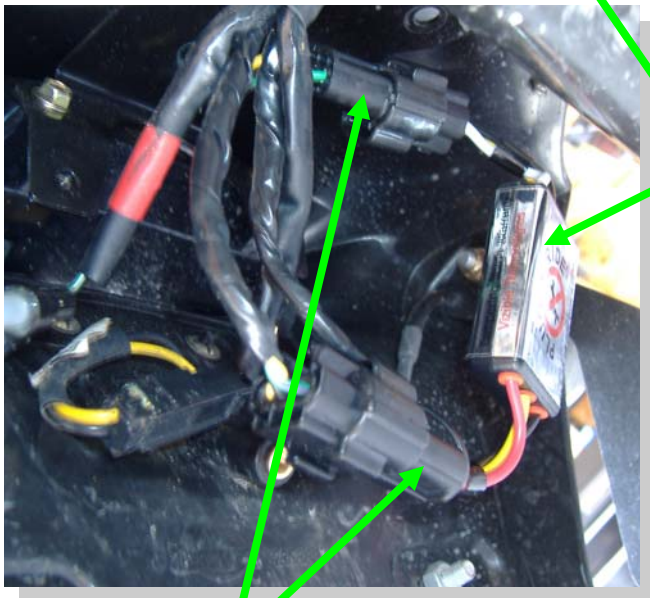

Test for functionality. Done!

STEP 2:

Plug the SB-ST1050 unit in series between the 3conductor connector. (The connectors are keyed such that installation can only be performed one way.)



Questions? Goto www.vizi-tec.com